PLS-125P INSTALLATION INSTRUCTION



Installation:

Mount the PLS-125P to the electrical outlet inside the power supply housing as shown in (Figure 1).

What do the LED indicators tell me?


GREED LED ON: Indicates the grounding is operational.

RED LED ON: Indicates the surge protection circuitry is operational.

How can I tell if the PLS-125P is working?

The rated varistor voltage of an MOV can be tested with a variable voltage DC source ammeter and DC voltmeter across the device. Measure the voltage at 1.0mA and compare to the rated varistor voltage of the unit.

FIGURE 1

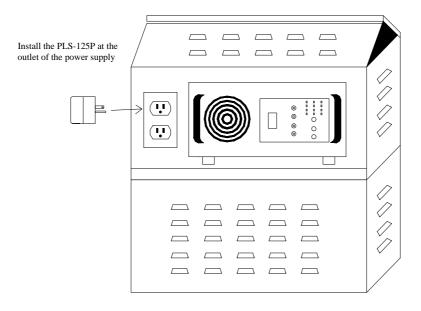

DWG# 10125P00 REV B

Cable Innovations,Inc. 4737 Hwy. 332 Suite 21 Hoschton,GA 30548 770-962-5146 www.cableinnovations.com